




Step 1.  
Cut 5.0" hole in raised floor panel. (Use manufacturers suggested guidelines for cutting panel)

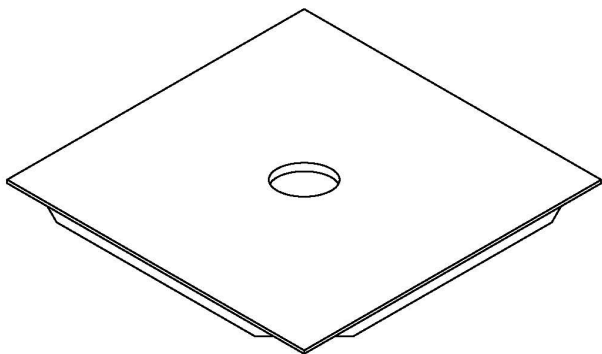


Step 2.  
Install grommet into cutout.

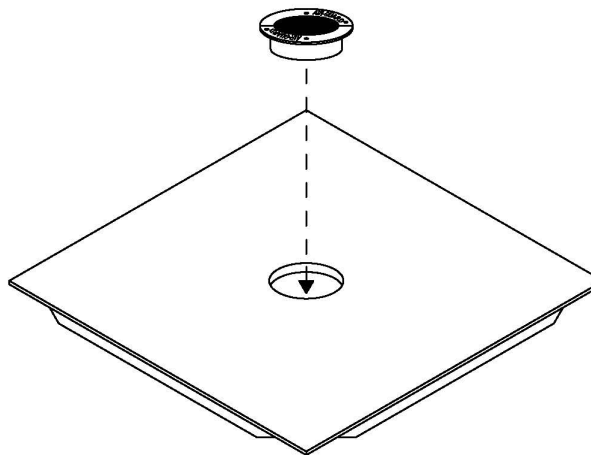

Step 3.  
Attach utilizing (4) self drilling screws supplied.

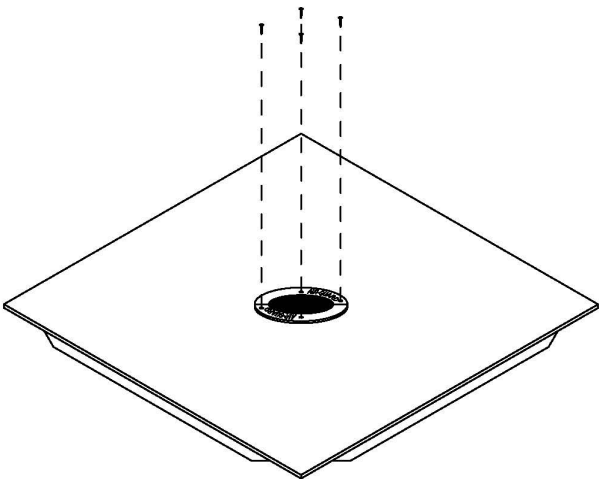

Step 4.  
For existing holes with cables: install one half of split grommet centering cables towards the middle of the brush closure. Install 2nd half of grommet and fasten with (4) self drilling screws supplied.

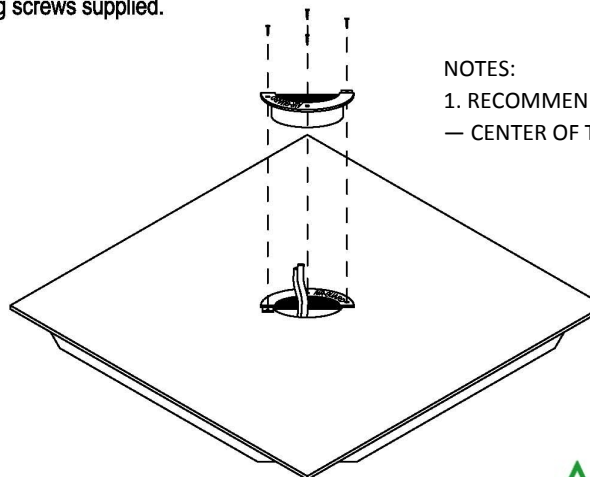

NOTES:

- 1. RECOMMENDED FLOOR TILE CUT-OUT DIMENSIONS  
— CENTER OF TILE—5.00"



|   |             |           |   |
|---|-------------|-----------|---|
| <b>Air-Guard 5" Round Installation Drawing</b>  |             |           |   |
| This document and the information on it is the property of PDU Cables.<br>PDU Cables is a trademark of Engineered Products Company. |             |           |   |
| Drawing No.:  |             | Page 1 of | 1 |
| Date:   | 2/11/2013   | Revision  | 1 |
| Part No.:   | 116-800-050 |           |   |